PHILIPS

NORELCO

6 in1 PROFESSIONAL GROOMING KIT

G290 Rechargeable Cordless

Downloaded from www.Manualslib.com manuals search engine

4203 000 54182

ENGLISH

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic safety precautions should always be followed, including the following:

Read all instructions before using this appliance.

DANGER

To reduce the risk of electric shock:

1. Do not reach for a Groomer that has fallen into water. Unplug immediately.
2. Do not use while bathing or in a shower.
3. Do not place or store Groomer where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
4. Always unplug this Groomer from the electrical outlet immediately after using, except when Groomer is (re)charging.
5. Unplug Groomer before cleaning.
6. When discarding Groomer, unplug Groomer to remove rechargeable battery. See Battery Removal instruction sheet.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

1. Close supervision is necessary when this appliance is used by, on, or near children or invalids.
2. Use this Groomer for its intended household use as described in this manual. Do not use attachments not recommended by Philips Electronics North America Corporation.
3. Never operate this Groomer if it has a damaged cord or plug, if it is not working properly, if it has been dropped, damaged, or dropped into water. Return the Groomer to an Authorized Norelco Service Location for examination and repair.
4. Keep the Groomer, cord and any attachments away from heated surfaces.
5. Never drop or insert any object into any opening.
6. Do not operate, charge or plug in Groomer outdoors or where aerosol (spray) products are being used or where oxygen is being administered.
7. Do not use this Groomer with a damaged or broken cutter, cutting unit, or shaving foil as injury may occur.
8. Always attach plug to Groomer first, then to outlet. To disconnect, turn on/off switch to "OFF" position (switch is down), then remove plug from outlet.
9. To prevent possible damage to the cord, do not wrap cord around the Groomer.
10. Never put Groomer in direct sunlight or store at a temperature above 140°F.
11. This Groomer is for use on human hair only. Do not use this Groomer for any other purpose.
12. Always store your Groomer, attachments and power plug in a moisture-free area. Make sure the cord is disconnected from the Groomer.

Features

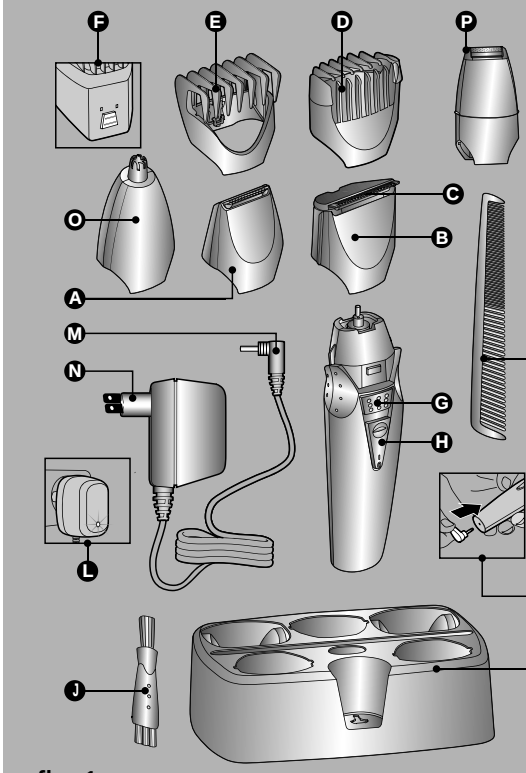

fig. 1

A Neckline & Sideburn Trimmer Attachmer
B Full Width Trimmer Attachment
C Lifetime Self-Sharpening 3-Dimensional Rounded Stainless Steel Cutter Blades
D AccuControl Beard & Moustache Trimme Guide Comb
E Hair Clipping Comb
F 9 Position Hair Length Selector
G Release Button
H On/Off Slide Switch
I Socket for appliance plug
J Cleaning Brush
K Styling Comb
L LED Charging Indicator Light on Adapto
M Appliance Plug
N Charging Plug
O Nose, Ear, Eyebrow Trimmer Attachment
P Micro Shaver
Q Store & Charge Stand
Full Two-Year Warranty
60-Day Money-Back Guarantee

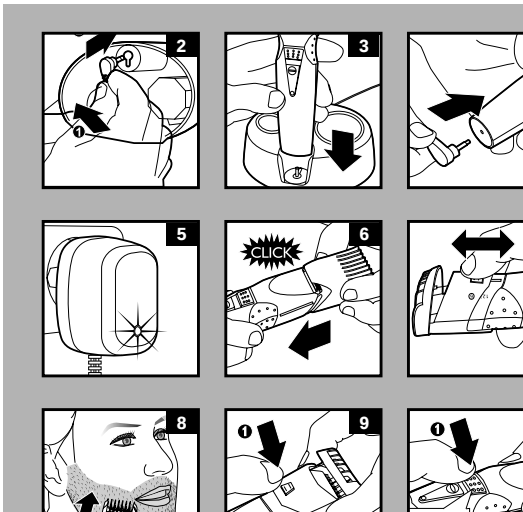

Downloaded from www.Manualslib.com manuals search engine

SAVE THESE INSTRUCTIONS

IMPORTANT: YOUR GROOMER CONTAINS A NICKEL-CADMIUM RECHARGEABLE BATTERY.

See Battery Removal instruction sheet.

IMPORTANT: The power plug contains a transformer. Do not cut off the power plug to replace it with another plug as this will cause a hazardous condition.

Put It To The Test

Like many new products, your Norelco Personal Groomer may take a little getting used to. If you are using an electric Personal Groomer for the first time, or if you've been using a different brand, take the time to acquaint yourself with your new Personal Groomer.

Your Personal Groomer features the unique AccuControl System combined with adjustable Length Settings to make trimming facial hairs or hair clipping goof proof.

Throw your scissors away and put your new Personal Groomer to the test. We guarantee precise, professional results or Norelco will refund you the full purchase price.

Downloaded from www.Manualslib.com manuals search engine

T

IONS

appliance, basic safety
s be followed, including

efore using this

lectric shock:

roomer that has fallen
mediately.
ning or in a shower.
e Groomer where it
nto a tub or sink. Do
nto water or other

oomer from the
diately after using,
r is (re)charging.
ore cleaning.
omer, unplug Groomer
le battery. See Battery
heet.

burns, fire, electric
sons:

ecessary when
by, on, or near children

its intended
cribed in this manual.
nts not recommended
North America

roomer if it has a
, if it is not working
dropped, damaged, or
eturn the Groomer to
o Service Location for
ir.
ord and any
m heated surfaces.
any object into any

Features

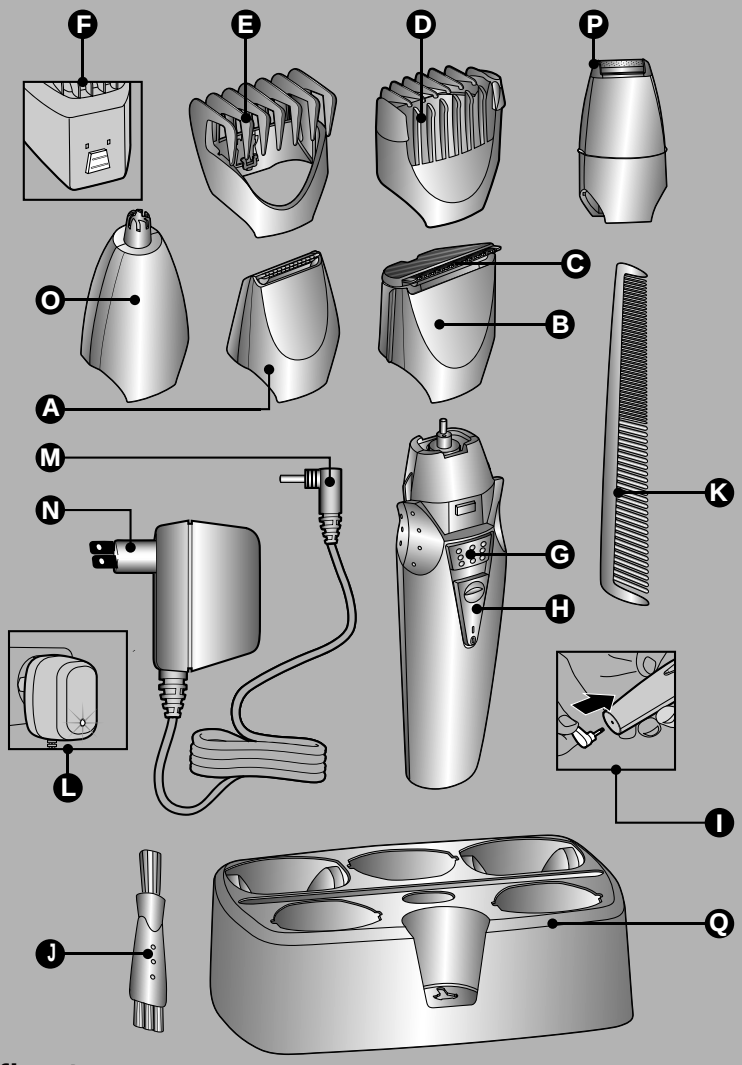

fig. 1

A Neckline & Sideburn Trimmer Attachment
B Full Width Trimmer Attachment
C Lifetime Self-Sharpening 3-Dimensional Rounded Stainless Steel Cutter Blades
D AccuControl Beard & Moustache Trimmer Guide Comb
E Hair Clipping Comb
F 9 Position Hair Length Selector
G Release Button
H On/Off Slide Switch
I Socket for appliance plug
J Cleaning Brush
K Styling Comb
L LED Charging Indicator Light on Adaptor
M Appliance Plug
N Charging Plug
O Nose, Ear, Eyebrow Trimmer Attachment
P Micro Shaver
Q Store & Charge Stand
Full Two-Year Warranty
60-Day Money-Back Guarantee

To Charge/Recha

- Fully charge Groomer time or after non-use
- Battery performance only when the battery empty.
- Charging or rechargin 40˚F or higher than 9 lifespan of the battery
- Continuously rechargi lifespan of battery.

1 Be certain Groome

2 You may charge the

- In the charging stand plug into the socket lo the charging stand (fig directly on the chargin
- By inserting the applia Groomer (fig. 4).

3 Plug charging plug in Use only the cord p

4 After a few momen Indicator Light on th to indicate the Groo

- It will take approxima charge the Groomer time of up to 35 minu
- Disconnect the cord a outlet.

Optimize the wo of the battery

- After the Groomer ha first time, do not rech between trimming ses until the battery is co
- Do not charge for mo
- Do not keep cord per
- Discharge/run down t twice a year by letting stops.
- If the Groomer hasn't period of time, it mus full 10 hours.

Downloaded from www.Manualslib.com manuals search engine

s Groomer with a damaged
er, cutting unit, or shaving foil
ccur.
plug to Groomer first, then to
nnect, turn on/off switch to
(switch is down), then
om outlet.
ssible damage to the cord, do
around the Groomer.
omer in direct sunlight or
perature above 140°F.
is for use on human hair only.
s Groomer for any other

our Groomer, attachments
g in a moisture-free area.
cord is disconnected from the

HESE CTIONS

**OUR GROOMER
NICKEL-CADMIUM
LE BATTERY.**

val instruction sheet.

**he power plug contains a
o not cut off the power
it with another plug as this
ardous condition.**

e Test

oducts, your Norelco Personal
a little getting used to. If you
c Personal Groomer for the
ve been using a different brand,
cquaint yourself with your new

omer features the unique
m combined with adjustable
make trimming facial hairs
f proof.

s away and put your new
to the test. We guarantee
l results or Norelco will refund
se price.

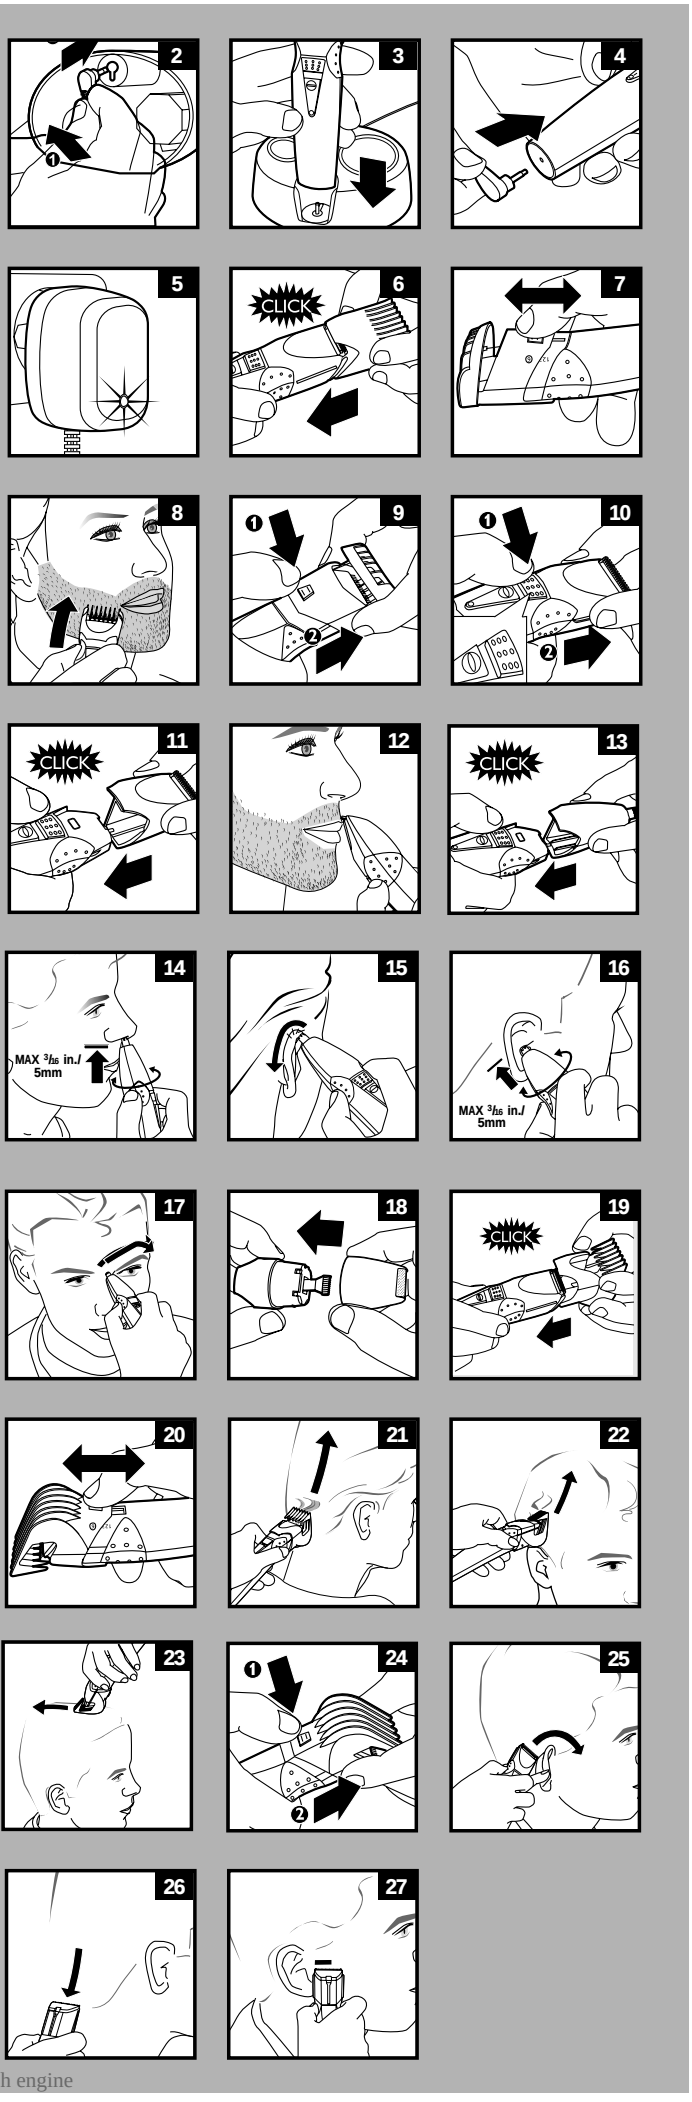

1 Charge according to directio
Personal Groomer from out

2 Slide ON/OFF switch ON to

3 If the battery is empty and y
your beard, charge the Groo
3 hours and you will have en
one use (10 minutes).

AccuControl System

The unique Norelco AccuContro
in complete control while trimmi
hairs with no prior experience ne
Guide Comb adjusts automatical
contours of your face for a trim t
and accurate. And, it's easy to ma
those hard-to-reach areas such as
chin. The Hair Length Selector allo
choose among 9 preset hair lengt
position so you can control the e
you desire or vary the length of y
The Hair Clipping Comb also fea
hair lengths and clicks into positio
control the exact hair length you
Norelco Personal Groomer for p
proof results every time or your

Trimming

- Make sure hair is clean and dr
- Always comb the hair with the
  the direction of growth before
  trimming.

Do not move the Groomer too
smooth and gentle movements.

Trimming your Beard & M
AccuControl Guide Com

- Use this Groomer for its inten
  use as described in this manua
- Make sure that the Groomer
  before you start trimming. Th
  not operate while cord is con
  electrical outlet.

1 Put the AccuControl comb
trimmer attachment until yo
into place (fig. 6). The AccuC
not work with the smaller n
sideburn trimmer, or micro sh

2 Press the Hair Length Select
the desired trimming length
selected setting number will
window to the left of the H
Selector (fig. 7). See Table 1 f

Downloaded from www.Manualslib.com manuals search engine

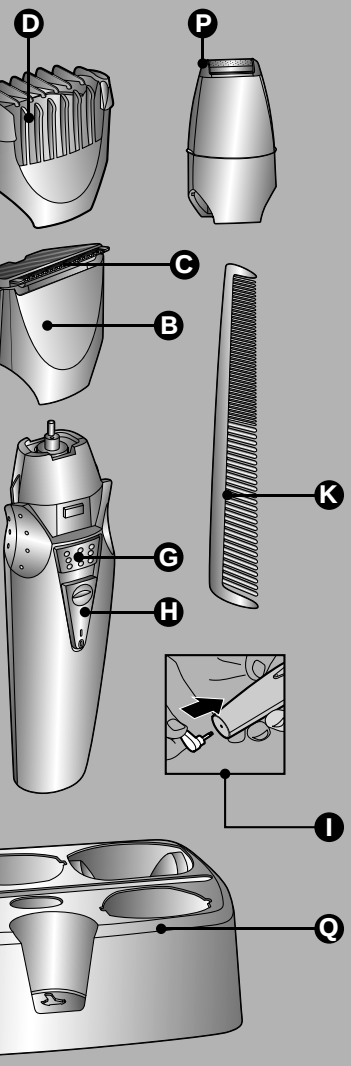

Trimmer Attachment
ttachment
ng 3-Dimensional
el Cutter Blades
Moustache Trimmer

n Selector

lug

or Light on Adaptor

mmer Attachment

y
Guarantee

To Charge/Recharge

- Fully charge Groomer before using for the first time or after non-use for a long period of time.
- Battery performance is best if you recharge only when the battery is (almost) completely empty.
- Charging or recharging at temperatures below 40˚F or higher than 95˚F adversely affects lifespan of the battery.
- Continuously recharging Groomer will reduce lifespan of battery.

1 Be certain Groomer is OFF.

2 You may charge the Groomer:

- In the charging stand by inserting the appliance plug into the socket located in the bottom of the charging stand (fig. 2). Place the Groomer directly on the charging pin in the stand (fig. 3).
- By inserting the appliance plug directly into the Groomer (fig. 4).

3 Plug charging plug into any 120V AC outlet. Use only the cord provided.

4 After a few moments, the green Charging Indicator Light on the power plug will light to indicate the Groomer is charging (fig. 5).

- It will take approximately 10 hours to fully charge the Groomer for a cordless trimming time of up to 35 minutes.
- Disconnect the cord and unplug from electrical outlet.

Optimize the working life of the battery

- After the Groomer has been charged for the first time, do not recharge the Groomer between trimming sessions. Continue using it until the battery is completely empty.
- Do not charge for more than 24 hours.
- Do not keep cord permanently plugged in.
- Discharge/run down the battery completely twice a year by letting the motor run until it stops.
- If the Groomer hasn't been used for a long period of time, it must be recharged for a full 10 hours.

- If you are trimming fo
using the AccuContro
trimming length settin
accidentally trimming
become familiar with
Length Selector to de
Selector will "click" in
setting.

3 Switch the Groome

4 To trim in the most
Groomer against th
growth. Make sure t
Comb always stays
(fig. 8).

NOTE: Since all hairs do
direction, you may want
directions (i.e., upwards,
Practice is best for optir

- If a lot of hair has acc
Comb, remove the co
shake the hair out of
use the cleaning brush
hair from the comb a
- REMEMBER: You must
selector back to your
you replace the guide

Table 1. Beard t

Setting	
1	Stubble
2	Closely Cropped
3	Short
4	Medium Short
5	Medium
6	Medium Long
7	Long
8	Extra Long
9	Longest

- The remaining hair le
the smallest distance
blade and the spot wh
with the skin.
- Cutting without the c

Downloaded from www.Manualslib.com manuals search engine

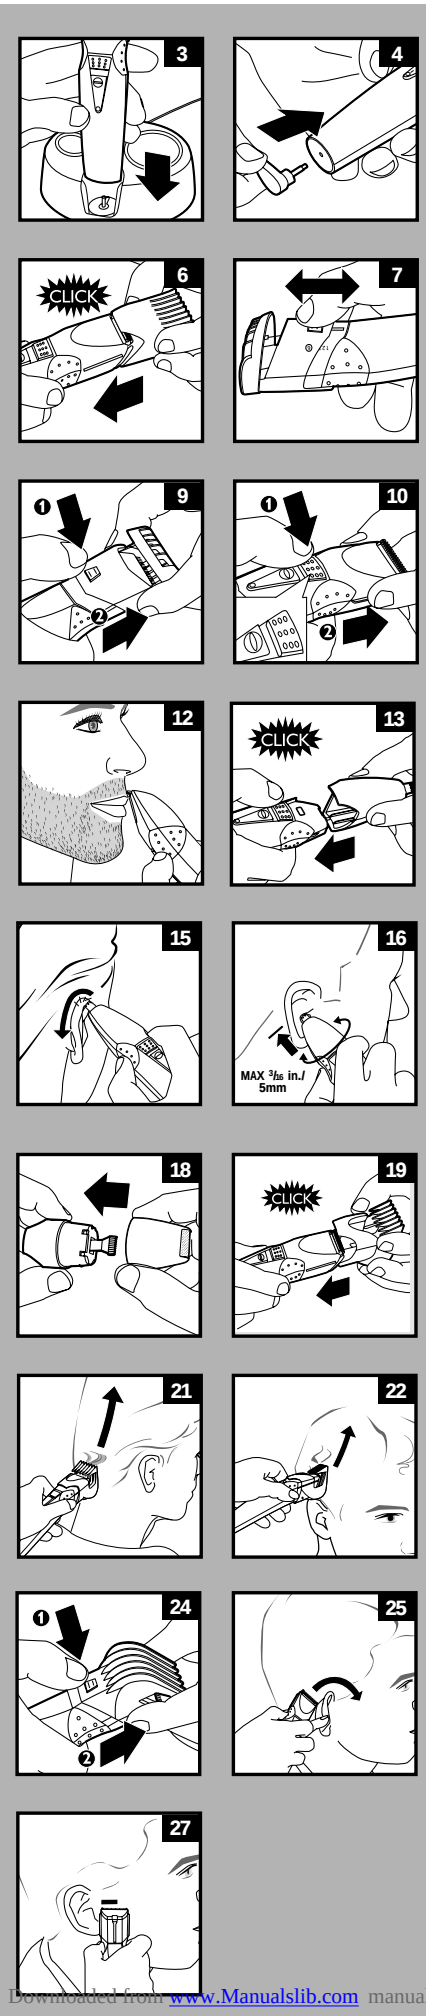

Cordless Trimming

1 Charge according to directions. Unplug Personal Groomer from outlet.

2 Slide ON/OFF switch ON to begin trimming.

3 If the battery is empty and you want to trim your beard, charge the Groomer for at least 3 hours and you will have enough power for one use (10 minutes).

AccuControl System

The unique Norelco AccuControl System puts you in complete control while trimming your facial hairs with no prior experience needed. The flexing Guide Comb adjusts automatically to hug the contours of your face for a trim that is both even and accurate. And, it's easy to maneuver over those hard-to-reach areas such as the throat and chin. The Hair Length Selector allows you to choose among 9 preset hair lengths and clicks into position so you can control the exact hair length you desire or vary the length of your facial hair. The Hair Clipping Comb also features 9 preset hair lengths and clicks into position so you can control the exact hair length you desire. The Norelco Personal Groomer for professional, goof-proof results every time or your money back.

Trimming

- Make sure hair is clean and dry.
- Always comb the hair with the styling comb in the direction of growth before you start trimming.

Do not move the Groomer too fast. Make smooth and gentle movements.

Trimming your Beard & Moustache with AccuControl Guide Comb Attachment

- Use this Groomer for its intended household use as described in this manual.
- Make sure that the Groomer is fully charged before you start trimming. This Groomer will not operate while cord is connected to electrical outlet.

1 Put the AccuControl comb on the full width trimmer attachment until you hear it click into place (fig. 6). The AccuControl comb will not work with the smaller neckline and sideburn trimmer, or micro shaver attachments.

2 Press the Hair Length Selector and slide it to the desired trimming length setting. The selected setting number will appear in the window to the left of the Hair Length Selector (fig. 7). See Table 1 for settings.

setting the AccuControl guide c
position will result in a stubble

Beard Trimming Withou AccuControl Guide Com

Remove AccuControl guide comb

- Defining hair lines
- Trimming nape of neck
- Removing single, unwanted hair

1 Be certain the Groomer is in position.

2 Remove the AccuControl com by pressing and sliding the Ha Selector upwards (fig. 9).

Never pull off the AccuControl co by grasping the flexible top portio off by the bottom part of attachm

3 Switch the Groomer on.

4 Make well-controlled moveme hair/skin lightly whith the Gro

Defining Beard, Moustac Sideburns

1 Be certain the Groomer is in t

2 Remove the AccuControl com by pressing and sliding the Ha Selector upwards (fig. 9).

3 Detach the full width trimme pushing the release button (fi

4 Put the smaller neckline and si attachment on the Groomer will hear a click.

- Hold the Groomer upright whe smaller neckline and sideburn t attachment (fig. 12).

Using Nose, Ear & Eyebro Attachment

1 Be certain the Groomer is in th

2 To attach or remove nose, ea attachment (or change attach

- Remove the AccuControl comb (fig. 9).
- Remove the full width trimmer pushing the release button (fig.
- Put the nose, ear, eyebrow attac Groomer (fig. 13). You will hear

Downloaded from www.Manualslib.com manuals search engine

arge

before using for the first
for a long period of time.
is best if you recharge
is (almost) completely

g at temperatures below
5˚F adversely affects
.
ing Groomer will reduce

r is OFF.

Groomer:

by inserting the appliance
ocated in the bottom of
. 2). Place the Groomer
ng pin in the stand (fig. 3).
ance plug directly into the

nto any 120V AC outlet.
rovided.

ts, the green Charging
he power plug will light
omer is charging (fig. 5).

tely 10 hours to fully
for a cordless trimming
utes.
and unplug from electrical

rking life

as been charged for the
harge the Groomer
ssions. Continue using it
mpletely empty.
ore than 24 hours.
rmanently plugged in.
the battery completely
the motor run until it

been used for a long
t be recharged for a

ing

- If you are trimming for the first time, start by using the AccuControl comb at the maximum trimming length setting (#9) to prevent accidentally trimming hairs too short. As you become familiar with the settings, adjust Hair Length Selector to desired trimming length. Selector will "click" into position at each setting.

3 Switch the Groomer ON.

4 To trim in the most effective way, move the Groomer against the direction of hair growth. Make sure the surface of the Guide Comb always stays in contact with the skin (fig. 8).

NOTE: Since all hairs do not grow in the same direction, you may want to try different trimming directions (i.e., upwards, downwards, or across). Practice is best for optimum results.

- If a lot of hair has accumulated in the Guide Comb, remove the comb and blow and/or shake the hair out of the comb. You can also use the cleaning brush provided to remove hair from the comb area.
- REMEMBER: You must reset the hair length selector back to your desired setting every time you replace the guide comb on the appliance.

Table 1. Beard trimmer

Setting		Remaining hair length (mm)
1	Stubble	2
2	Closely Cropped	4
3	Short	6
4	Medium Short	8
5	Medium	10
6	Medium Long	12
7	Long	14
8	Extra Long	16
9	Longest	18

- The remaining hair length corresponds with the smallest distance between the cutting blade and the spot where the comb is in contact with the skin.
- Cutting without the comb attachment or setting the AccuControl guide comb to #1 position will result in a stubble beard look.

Trimming Nose Hai

- Make sure nasal passages

1 Place nose, ear and eye Groomer.

2 Switch the Groomer o the attachment into on

CAUTION: Do Not inse than 3/16 in./5mm into

3 Slowly move the tip in it around at the same t remove unwanted hair. sure the side of the tip This will reduce the tic occur during trimming

4 Turn off Groomer. Wip after each use.

Trimming Ear Hair

- Clean outer area of ear a sure it is free of wax.
- Nose, ear and eyebrow a on the Groomer.

1 Switch the Groomer o softly around the edge hairs extending beyond

2 Carefully insert the tip

CAUTION: Do not inse than 3/16 in./5mm into could cause damage to (fig. 16).

3 Turn off Groomer. Wip after each use.

Trimming Eyebrow

- Nose, ear and eyebrow a on Groomer.

1 Switch the Groomer o cut individual eyebrow

The Groomer can be used hairs.

2 Put the Groomer at the move it along the edge

Downloaded from www.Manualslib.com manuals search engine

mer from outlet.

switch ON to begin trimming.

s empty and you want to trim
rge the Groomer for at least
u will have enough power for
nutes).

l System

o AccuControl System puts you
while trimming your facial
experience needed.The flexing
s automatically to hug the
ce for a trim that is both even
it's easy to maneuver over
areas such as the throat and
h Selector allows you to
eset hair lengths and clicks into
control the exact hair length
he length of your facial hair.
Comb also features 9 preset
ks into position so you can
air length you desire. The
Groomer for professional, goof-
time or your money back.

clean and dry.
hair with the styling comb in
growth before you start

Groomer too fast. Make
movements.

ur Beard & Moustache with Guide Comb Attachment

r for its intended household
in this manual.
he Groomer is fully charged
trimming. This Groomer will
e cord is connected to

ontrol comb on the full width
ment until you hear it click
6). The AccuControl comb will
the smaller neckline and
er, or micro shaver attachments.

Length Selector and slide it to
mming length setting. The
number will appear in the
left of the Hair Length
See Table 1 for settings.

Beard Trimming Without AccuControl Guide Comb

Remove AccuControl guide comb if you are:

- Defining hair lines
- Trimming nape of neck
- Removing single, unwanted hairs

1. Be certain the Groomer is in the OFF position.
2. Remove the AccuControl comb attachment by pressing and sliding the Hair Length Selector upwards (fig. 9).

Never pull off the AccuControl comb attachment by grasping the flexible top portion. Always pull off by the bottom part of attachment.

3. Switch the Groomer on.
4. Make well-controlled movements. Touch the hair/skin lightly whith the Groomer.

Defining Beard, Moustache and Sideburns

1. Be certain the Groomer is in the OFF position.
2. Remove the AccuControl comb attachment by pressing and sliding the Hair Length Selector upwards (fig. 9).
3. Detach the full width trimmer attachment by pushing the release button (fig. 10).
4. Put the smaller neckline and sideburn trimmer attachment on the Groomer (fig. 11). You will hear a click.

- Hold the Groomer upright when you use the smaller neckline and sideburn trimmer attachment (fig. 12).

Using Nose, Ear & Eyebrow Attachment

1. Be certain the Groomer is in the OFF position.
2. To attach or remove nose, ear, eyebrow attachment (or change attachments):

- Remove the AccuControl comb attachment (fig. 9).
- Remove the full width trimmer attachment by pushing the release button (fig. 10).
- Put the nose, ear, eyebrow attachment on the Groomer (fig. 13). You will hear a click.

the base of the nose towar
of the eyebrow in the direc
growth (fig. 17).

IMPORTANT: Do not use the G
or trim the entire eyebrow. Do
your eyelashes. Be careful not to
your eyelashes and eyes!

3. Turn off Groomer. Wipe at
after each use.

Shaving With Micro Sh Attachment

1. Put the micro shaver attach
groomer (fig. 18).
2. Use the narrow micro shav
along contoured edges to r
stubble while creating a sm
defined beard line.

Before using the micro shaver, al
wear and damage. If the micro s
of wear or damage, do not use
occur. Do not use the micro sha
been replaced.

Gently press the micro shaver o
Do not press too hard.

Hair Clipping

- Make sure that the appliance
before you start clipping hair.
will not operate while cord is
electrical outlet.
- Before you start clipping, mak
head of the person whose ha
is at the same level as your cl
parts of his/her head are clea
within easy reach.
- Only use the appliance on dr
- Do not use on freshly washed
- Before you begin, comb the ha
of growth.
- To achieve optimal clipping re
move the appliance slowly thr
against the direction of hair g

Clipping with hair comb

1. Put the hair clipper comb o
trimmer attachment and pu
it 'click' into place (fig. 19).
2. Press the Hair Length Selec
the desired setting. See Tabl

Downloaded from www.Manualslib.com manuals search engine

trimming for the first time, start by
AccuControl comb at the maximum
length setting (#9) to prevent
lly trimming hairs too short. As you
amiliar with the settings, adjust Hair
lector to desired trimming length.
will "click" into position at each

the Groomer ON.

in the most effective way, move the
er against the direction of hair
Make sure the surface of the Guide
always stays in contact with the skin

e all hairs do not grow in the same
ou may want to try different trimming
i.e., upwards, downwards, or across).
best for optimum results.

hair has accumulated in the Guide
move the comb and blow and/or
hair out of the comb. You can also
leaning brush provided to remove
the comb area.
ER: You must reset the hair length
back to your desired setting every time
ce the guide comb on the appliance.

1. Beard trimmer

	Remaining hair length (mm)
	2
Cropped	4
	6
Short	8
	10
Long	12
	14
ng	16
	18

ining hair length corresponds with
est distance between the cutting
the spot where the comb is in contact
skin.
without the comb attachment or
e AccuControl guide comb to #1
will result in a stubble beard look.

Trimming Without Control Guide Comb

ccuControl guide comb if you are:

hair lines
nape of neck
single, unwanted hairs

ain the Groomer is in the OFF
n.

Trimming Nose Hair

- Make sure nasal passages are clean.

1. Place nose, ear and eyebrow attachment on Groomer.

2. Switch the Groomer on and insert the tip of the attachment into one nostil (fig. 14).

CAUTION: Do Not insert the tip more than 3/16 in./5mm into your nostril.

3. Slowly move the tip in and out while turning it around at the same time in order to remove unwanted hair. For best results, make sure the side of the tip is firm against skin. This will reduce the tickling effect that can occur during trimming of nose hair.

4. Turn off Groomer. Wipe attachment clean after each use.

Trimming Ear Hair

- Clean outer area of ear and ear canal. Make sure it is free of wax.
- Nose, ear and eyebrow attachment should be on the Groomer.

1. Switch the Groomer on and move the tip softly around the edge of ear to remove hairs extending beyond the outer ear (fig. 15).

2. Carefully insert the tip into outer ear canal.

CAUTION: Do not insert the tip further than 3/16 in./5mm into the ear as this could cause damage to the eardrum (fig. 16).

3. Turn off Groomer. Wipe attachment clean after each use.

Trimming Eyebrow

- Nose, ear and eyebrow attachment should be on Groomer.

1. Switch the Groomer on and use the tip to cut individual eyebrow hairs.

The Groomer can be used for clipping single long hairs.

2. Put the Groomer at the root of the hair and move it along the edge of the eyebrow from the base of the nose towards the outer tip of the eyebrow in the direction of hair growth (fig. 17).

IMPORTANT: Do not use the Groomer to define or trim the entire eyebrow. Do not try to trim your eyelashes. Be careful not to get too close to your eyelashes and eyes!

3. Turn off Groomer. Wipe attachment clean after each use.

3. The setting selected will appear in window to the left of the Hair Len Selector (fig. 20).

When you are clipping for the first time the maximum clipping length setting (#9 familiarize yourself with the appliance ar accidentally trimming hairs too short. As become familiar with the settings, adjust Length Selector to desired trimming len Selector will 'click' into position at each s

Table 2. Hair clipper

Setting	Remaining hai (mm)
1	4
2	6
3	8
4	10
5	12
6	14
7	16
8	18
9	20

4. Make sure that the flat part of the always in full contact with the scalp an even result (fig. 21-22).

5. Move the appliance slowly over the from different directions to achieve result (fig. 23).

6. Always move the appliance against direction of hair growth.

7. Make overlapping passes over the h ensure that all hair that should be c been cut.

8. Turn the Groomer off and remove comb often to blow and/or shake c that has accumulated.

- REMEMBER: You must reset the hair selector back to your desired setting time you replace the hair clipping co appliance.

Contouring without the hair cl comb attachment

1. Remove the hair comb by pressing sliding the Hair Length Selector up (fig. 24).

Be careful when you are clipping withou attachment as when the appliance is tur will trim every hair it touches.

2. Tilt the appliance in such a way tha one edge of the trimming attachme

Downloaded from www.Manualslib.com manuals search engine

comb attachment
Hair Length

comb attachment
tion. Always pull
hment.

ments. Touch the
Groomer.

ache and

n the OFF position.

comb attachment
Hair Length

mer attachment by
(fig. 10).

l sideburn trimmer
er (fig. 11). You

when you use the
n trimmer

row

the OFF position.

ear, eyebrow
chments):

mb attachment

er attachment by
g. 10).
tachment on the
ar a click.

Shaving With Micro Shaver Attachment

1. Put the micro shaver attachment on the groomer (fig. 18).

2. Use the narrow micro shaver to shave along contoured edges to remove any stubble while creating a smooth well-defined beard line.

Before using the micro shaver, always check it for wear and damage. If the micro shaver shows signs of wear or damage, do not use it as injury may occur. Do not use the micro shaver until it has been replaced.

Gently press the micro shaver onto the skin. Do not press too hard.

Hair Clipping

- Make sure that the appliance is fully charged before you start clipping hair. The appliance will not operate while cord is connected to electrical outlet.
- Before you start clipping, make sure that the head of the person whose hair you are cutting is at the same level as your chest so that all parts of his/her head are clearly visible and within easy reach.
- Only use the appliance on dry hair.
- Do not use on freshly washed hair.
- Before you begin, comb the hair in the direction of growth.
- To achieve optimal clipping results, always move the appliance slowly through the hair against the direction of hair growth.

Clipping with hair comb attachment

1. Put the hair clipper comb on the full width trimmer attachment and push until you hear it 'click' into place (fig. 19).

2. Press the Hair Length Selector and slide it to the desired setting. See Table 2.

touches the hair
contours around

3. To contour the r
turn the applianc
trimming attachr
(fig. 26).

4. To contour the s
and hold it with
pointing downwa

Cleaning

- Do not use water
the Groomer.
- Always switch Gro
- Do not use abrasiv
as alcohol, benzene
the Groomer.
- Never clean, replac
attachments with r
- Do not apply press
- Do not touch cutt
may damage them.
- Do not use while
immerse the Groo
liquids as damage t

During Use:

- If cut hairs have ac
Comb area, remov
or using cleaning b
to adjust the trimr
selected setting wh
comb on Groomer

Once a Week:

1. Make sure the G
and disconnecte

2. Remove any atta

3. Also separate th
shaver attachmer

Downloaded from www.Manualslib.com manuals search engine

air

es are clean.

yebrow attachment on

on and insert the tip of
one nostil (fig. 14).

**nsert the tip more
o your nostril.**

in and out while turning
e time in order to
ir. For best results, make
ip is firm against skin.
tickling effect that can
ng of nose hair.

Vipe attachment clean

r

r and ear canal. Make

v attachment should be

on and move the tip
ge of ear to remove
nd the outer ear (fig. 15).

ip into outer ear canal.

**sert the tip further
o the ear as this
o the eardrum**

Vipe attachment clean

w

v attachment should be

on and use the tip to
w hairs.
ed for clipping single long

3 The setting selected will appear in the window to the left of the Hair Length Selector (fig. 20).

When you are clipping for the first time, start at the maximum clipping length setting (#9) to familiarize yourself with the appliance and prevent accidentally trimming hairs too short. As you become familiar with the settings, adjust the Hair Length Selector to desired trimming length. Selector will 'click' into position at each setting.

Table 2. Hair clipper

Setting	Remaining hair length (mm)
1	4
2	6
3	8
4	10
5	12
6	14
7	16
8	18
9	20

4 Make sure that the flat part of the comb is always in full contact with the scalp to obtain an even result (fig. 21-22).

5 Move the appliance slowly over the crown from different directions to achieve an even result (fig. 23).

6 Always move the appliance against the direction of hair growth.

7 Make overlapping passes over the head to ensure that all hair that should be cut has been cut.

8 Turn the Groomer off and remove the hair comb often to blow and/or shake out hair that has accumulated.

- REMEMBER: You must reset the hair length selector back to your desired setting every time you replace the hair clipping comb on the appliance.

4 Blow and/or shake ou
have accumulated in t

- The shaving foil is very
be handled.
- If foil becomes damaged
apply pressure to shavin

5 Do not clean the foil
may cause damage.

6 Place the attachment
or place it in the stor

This Groomer has no oth
parts. Any other service sh
an Authorized Norelco Se

Storage

- Be sure Groomer is tur
from outlet and Groom
safe, dry location where
banged, or subject to da
- Store the Groomer and
storage stand to preven
- Do not wrap cord arou
when storing.
- Store cord in a safe loca
be cut or damaged.
- Do not place or store
fall or be pulled into a t
other liquid while plugg

Replacing Trimme

If your cutters become da
continue using the Groom
replaced immediately by a
Service Location.

Replacing The Mic

If the shaving foil is worn
continue using the applian
foil immediately.

A worn or damaged shavi
replaced with an original P
is available at an authorize
Location.

1 Remove the detachab
pulling it from the app

Downloaded from www.Manualslib.com manuals search engine

ner at the root of the hair and
the edge of the eyebrow from
e nose towards the outer tip
v in the direction of hair
).

not use the Groomer to define
eyebrow. Do not try to trim
careful not to get too close to
eyes!

mer. Wipe attachment clean

h Micro Shaver

shaver attachment on the
8).

w micro shaver to shave
ed edges to remove any
creating a smooth well-
line.

icro shaver, always check it for
If the micro shaver shows signs
, do not use it as injury may
the micro shaver until it has

icro shaver onto the skin.
hard.

g

he appliance is fully charged
clipping hair. The appliance
while cord is connected to

clipping, make sure that the
on whose hair you are cutting
vel as your chest so that all
head are clearly visible and
n.
liance on dry hair.
reshly washed hair.
, comb the hair in the direction

al clipping results, always
ce slowly through the hair
tion of hair growth.

h hair comb attachment

pper comb on the full width
ment and push until you hear
ace (fig. 19).

Length Selector and slide it to

Contouring without the hair clipping comb attachment

1 Remove the hair comb by pressing and sliding the Hair Length Selector upwards (fig. 24).

Be careful when you are clipping without comb attachment as when the appliance is turned on it will trim every hair it touches.

2 Tilt the appliance in such a way that only one edge of the trimming attachment touches the hair ends when you shape the contours around the ears (fig. 25).

3 To contour the nape of the neck or hairline, turn the appliance and hold it with the trimming attachment pointing downwards (fig. 26).

4 To contour the sideburns, turn the appliance and hold it with the trimming attachment pointing downwards (fig. 27).

Cleaning

- Do not use water or a moist cloth to clean the Groomer.
- Always switch Groomer OFF before cleaning.
- Do not use abrasive, scourers or liquids such as alcohol, benzene, bleach or acetone to clean the Groomer.
- Never clean, replace or remove Groomer attachments with motor ON.
- Do not apply pressure to cutters.
- Do not touch cutters with hard objects as this may damage them.
- Do not use while bathing, showering or immerse the Groomer in water or other liquids as damage to Groomer may occur.

During Use:

- If cut hairs have accumulated in the Guide Comb area, remove hairs by shaking, blowing or using cleaning brush provided. Remember to adjust the trimming length back to your selected setting when you replace the guide comb on Groomer.

Once a Week:

1 Make sure the Groomer is switched OFF and disconnected from the electrical outlet.

2 Remove any attachment.

3 Also separate the top part of the micro shaver attachment from its body (fig. 28).

2 Remove the shaving foil by p
the shaving head (fig.29).

3 Place the new shaving foil ca
shaving head (fig. 30).

4 When the shaving foil is pro
push it into its end position
(fig. 31).

Replacing The Micro Sh

If the micro shaver cutter is worn
not continue using the appliance
micro foil cutter and the shaving

A worn or damaged micro shave
only be replaced with an original
which is available at an authorize
Service Location.

1 Remove the detachable shav
pulling it from the appliance

2 Remove the old micro shave
pulling it from the appliance

3 Make sure that the spring w
unit does not get lost.

4 Insert the new micro shaver
into the driving unit (fig. 33)

5 When the micro shaver cutt
positioned, push it into its e
your finger.

6 Replace the detachable shav
appliance.

Assistance

For assistance or the Authorized
Location nearest you, call toll fre

1-800-243-3050
or visit our website: www.no

Authorized Norelco Service Loc
is available 24 hours a day, 7 days

Downloaded from www.Manualslib.com manuals search engine

ng selected will appear in the
o the left of the Hair Length
fig. 20).

e clipping for the first time, start at
clipping length setting (#9) to
urself with the appliance and prevent
imming hairs too short. As you
ar with the settings, adjust the Hair
or to desired trimming length.
click' into position at each setting.

Hair clipper

	Remaining hair length (mm)
	4
	6
	8
	10
	12
	14
	16
	18
	20

e that the flat part of the comb is
full contact with the scalp to obtain
esult (fig. 21-22).

appliance slowly over the crown
rent directions to achieve an even
23).

ove the appliance against the
of hair growth.

rlapping passes over the head to
at all hair that should be cut has

Groomer off and remove the hair
en to blow and/or shake out hair
ccumulated.

:You must reset the hair length
ck to your desired setting every
place the hair clipping comb on the

ing without the hair clipping tachment

he hair comb by pressing and
e Hair Length Selector upwards

en you are clipping without comb
when the appliance is turned on it
hair it touches.

4 Blow and/or shake out any hair that may have accumulated in the attachment.

- The shaving foil is very delicate and should not be handled.
- If foil becomes damaged, replace it. Do not apply pressure to shaving foil.

5 Do not clean the foil with the brush, as this may cause damage.

6 Place the attachment back on the Groomer or place it in the storage stand.

This Groomer has no other user-serviceable parts. Any other service should be performed by an Authorized Norelco Service Location.

Storage

- Be sure Groomer is turned OFF. Remove cord from outlet and Groomer before storing in a safe, dry location where it will not be crushed, banged, or subject to damage.
- Store the Groomer and attachments in the storage stand to prevent damage.
- Do not wrap cord around Groomer or stand when storing.
- Store cord in a safe location where it will not be cut or damaged.
- Do not place or store Groomer where it can fall or be pulled into a tub or sink, water or other liquid while plugged in.

Replacing Trimmer Cutting Unit

If your cutters become damaged or worn, do not continue using the Groomer. Cutters should be replaced immediately by an Authorized Norelco Service Location.

Replacing The Micro Shaver Foil

If the shaving foil is worn or damaged, do not continue using the appliance. Replace the shaving foil immediately.

A worn or damaged shaving foil should only be replaced with an original Philips shaving foil, which is available at an authorized Norelco Service Location.

1 Remove the detachable shaving head by pulling it from the appliance (fig. 28).

2 Remove the shaving foil by pushing it out of the shaving head (fig.29).

3 Place the new shaving foil carefully in the shaving head (fig. 30).

4 When the shaving foil is properly positioned, push it into its end position with your finger (fig. 31).

PHILIPS NORELCO

60-DAY MONEY-BACK GUARANTEE

If you are not fully satisfied with your Norel
send the product back and we'll refund
purchase price.
***The Groomer must be shipped prepaid
mail, insurance prepaid, and have the sa
indicating purchase price and the date o
enclosed. The Groomer must be postmark
than 60 days after the date of purcha
reserves the right to verify the purchase
Groomer and limit refunds not to excee
retail price.***
Send dated sales receipt, your complete nam
address as indicated below, and the Groome

**Philips Domestic Appliances
and Personal Care Company
A Division of Philips Electronic
North America Corporation
450 North Medinah Road, Dock
Roselle, IL 60172-2329**

Please allow 4-6 weeks for delivery o
(Please Print)

Name _____

Address _____

City _____

State _____ Zip _____

Daytime Telephone No. (____) _____
Area Code

E-mail Address: _____

REASON FOR RETURNING:

_____

_____

_____

_____

_____

_____

_____

_____

_____

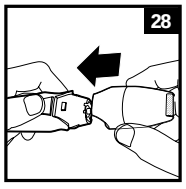

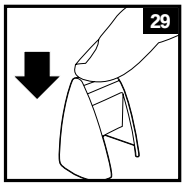

Downloaded from www.Manualslib.com manuals search engine

rlapping passes over the head to
at all hair that should be cut has

Groomer off and remove the hair
en to blow and/or shake out hair
ccumulated.

:You must reset the hair length
ck to your desired setting every
place the hair clipping comb on the

ring without the hair clipping tachment

he hair comb by pressing and
e Hair Length Selector upwards

en you are clipping without comb
when the appliance is turned on it
y hair it touches.

ppliance in such a way that only
of the trimming attachment
ne hair ends when you shape the
around the ears (fig. 25).

ur the nape of the neck or hairline,
ppliance and hold it with the
attachment pointing downwards

ur the sideburns, turn the appliance
t with the trimming attachment
downwards (fig. 27).

g

water or a moist cloth to clean
er.
ch Groomer OFF before cleaning.
abrasive, scourers or liquids such
benzene, bleach or acetone to clean
er.
, replace or remove Groomer
s with motor ON.
ly pressure to cutters.
ch cutters with hard objects as this
e them.
while bathing, showering or
e Groomer in water or other
amage to Groomer may occur.

Use:

have accumulated in the Guide
remove hairs by shaking, blowing
aning brush provided. Remember
e trimming length back to your
tting when you replace the guide
roomer.

Week:

Replacing The Micro Shaver Foil

If the shaving foil is worn or damaged, do not continue using the appliance. Replace the shaving foil immediately.

A worn or damaged shaving foil should only be replaced with an original Philips shaving foil, which is available at an authorized Norelco Service Location.

1. Remove the detachable shaving head by pulling it from the appliance (fig. 28).
2. Remove the shaving foil by pushing it out of the shaving head (fig.29).
3. Place the new shaving foil carefully in the shaving head (fig. 30).
4. When the shaving foil is properly positioned, push it into its end position with your finger (fig. 31).

Replacing The Micro Shaver Cutter

If the micro shaver cutter is worn or damaged, do not continue using the appliance. Replace the micro foil cutter and the shaving foil immediately.

A worn or damaged micro shaver cutter should only be replaced with an original Philips cutter, which is available at an authorized Norelco Service Location.

1. Remove the detachable shaving head by pulling it from the appliance (fig. 28).
2. Remove the old micro shaver cutter by pulling it from the appliance (fig. 32).
3. Make sure that the spring within the driving unit does not get lost.
4. Insert the new micro shaver cutter carefully into the driving unit (fig. 33).
5. When the micro shaver cutter is properly positioned, push it into its end position with your finger.
6. Replace the detachable shaving head on the appliance.

Assistance

For assistance or the Authorized Norelco Service Location nearest you, call toll free:

1-800-243-3050
or visit our website: www.norelco.com

Authorized Norelco Service Location information is available 24 hours a day, 7 days a week.

Downloaded from www.Manualslib.com manuals search engine

REASON FOR RETURNING:

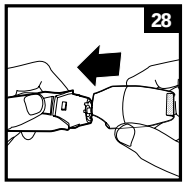

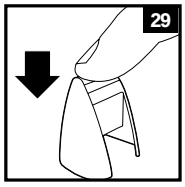

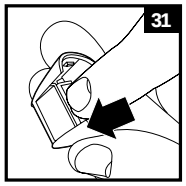

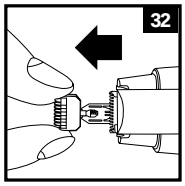

Battery Removal

- This Norelco Groomer contains a rechargeable Nickel-Cadmium batte must be disposed of properly.
- Battery should only be removed wi Groomer is to be discarded.
- Refer to Battery Removal instructio directions on removing the recharg battery.

Full Two-Year Warranty

Philips Electronics North America Corporation warrant Norelco product, Model G290, against defects in mater workmanship for a period of two years (cutters for up from the date of purchase, and agrees to repair or repl product without charge.

IMPORTANT: This warranty does not cover damage accident, misuse or abuse, lack of reasonable care, the a attachment not provided with the product or loss of p the product to any but the specific voltage.* Use of un replacement parts will void this warranty.

PHILIPS ELECTRONICS NORTH AMERICA COR WILL NOT PAY FOR WARRANTY SERVICE PER NON-AUTHORIZED REPAIR SERVICE AND WIL REIMBURSE THE CONSUMER FOR DAMAGE RE FROM WARRANTY SERVICE PERFORMED BY A AUTHORIZED REPAIR SERVICE.

NO RESPONSIBILITY IS ASSUMED FOR ANY SP INCIDENTAL OR CONSEQUENTIAL DAMAGES

In order to obtain warranty service, simply take or ship postage prepaid to the nearest Authorized Norelco Se suggested that for your protection you return shipment insured mail, insurance prepaid. Damage occurring duri covered by this warranty. **NOTE:** No other warranty, w authorized by Philips Electronics North America Corpo warranty gives you specific legal rights, and you may als rights which vary from state to state. Some states do n exclusion or limitation of incidental or consequential da above exclusion and limitations may not apply to you.

*Read enclosed instructions carefully.

Manufactured for:
Philips Domestic Appliances and Personal Care Compa
A Division of Philips Electronics North America Corpo
1010 Washington Blvd., Stamford, CT 06912-0015

e out any hair that may
in the attachment.

ery delicate and should not

aged, replace it. Do not
having foil.

foil with the brush, as this
e.

ent back on the Groomer
storage stand.

other user-serviceable
ce should be performed by
o Service Location.

s turned OFF. Remove cord
oomer before storing in a
here it will not be crushed,
o damage.
and attachments in the
event damage.
around Groomer or stand

location where it will not

ore Groomer where it can
o a tub or sink, water or
lugged in.

mer Cutting Unit

e damaged or worn, do not
oomer. Cutters should be
by an Authorized Norelco

Micro Shaver Foil

orn or damaged, do not
pliance. Replace the shaving

having foil should only be
nal Philips shaving foil, which
orized Norelco Service

chable shaving head by
e appliance (fig. 28).

PHILIPS
NORELCO

60-DAY MONEY-BACK GUARANTEE

If you are not fully satisfied with your Norelco Groomer, send the product back and we'll refund you the full purchase price.
The Groomer must be shipped prepaid by insured mail, insurance prepaid, and have the sales receipt, indicating purchase price and the date of purchase, enclosed. The Groomer must be postmarked no later than 60 days after the date of purchase. Norelco reserves the right to verify the purchase price of the Groomer and limit refunds not to exceed suggested retail price.
Send dated sales receipt, your complete name and address as indicated below, and the Groomer, prepaid to:

Philips Domestic Appliances
and Personal Care Company
A Division of Philips Electronics
North America Corporation
450 North Medinah Road, Dock 16
Roselle, IL 60172-2329

Please allow 4-6 weeks for delivery of check.
(Please Print)

Name _____

Address _____

City _____

State _____ Zip _____

Daytime Telephone No. (____) _____
Area Code

E-mail Address: _____

REASON FOR RETURNING:

_____

_____

_____

_____

_____

_____

_____

_____

_____

Downloaded from www.Manualslib.com manuals search engine

ving foil by pushing it out of
l (fig.29).

having foil carefully in the
. 30).

ng foil is properly positioned,
end position with your finger

e Micro Shaver Cutter

utter is worn or damaged, do
he appliance. Replace the
the shaving foil immediately.

micro shaver cutter should
h an original Philips cutter,
an authorized Norelco

achable shaving head by
he appliance (fig. 28).

micro shaver cutter by
he appliance (fig. 32).

the spring within the driving
et lost.

micro shaver cutter carefully
unit (fig. 33).

o shaver cutter is properly
it into its end position with

achable shaving head on the

Authorized Norelco Service
u, call toll free:

te: www.norelco.com

Service Location information
a day, 7 days a week.

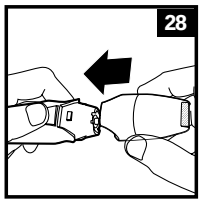

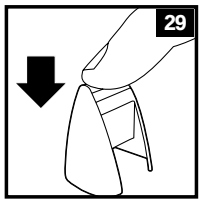

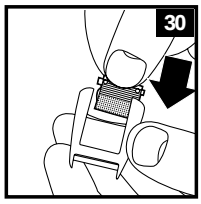

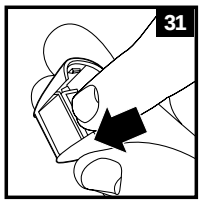

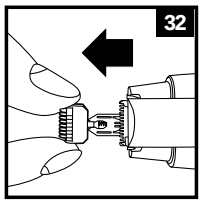

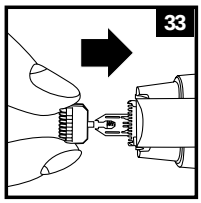

Battery Removal

- This Norelco Groomer contains a rechargeable Nickel-Cadmium battery, which must be disposed of properly.
- Battery should only be removed when Groomer is to be discarded.
- Refer to Battery Removal instruction sheet for directions on removing the rechargeable battery.

Full Two-Year Warranty

Philips Electronics North America Corporation warrants each new Norelco product, Model G290, against defects in materials or workmanship for a period of two years (cutters for up to five years) from the date of purchase, and agrees to repair or replace any defective product without charge.
IMPORTANT: This warranty does not cover damage resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachment not provided with the product or loss of parts or subjecting the product to any but the specific voltage.* Use of unauthorized replacement parts will void this warranty.
PHILIPS ELECTRONICS NORTH AMERICA CORPORATION WILL NOT PAY FOR WARRANTY SERVICE PERFORMED BY A NON-AUTHORIZED REPAIR SERVICE AND WILL NOT REIMBURSE THE CONSUMER FOR DAMAGE RESULTING FROM WARRANTY SERVICE PERFORMED BY A NON-AUTHORIZED REPAIR SERVICE.
NO RESPONSIBILITY IS ASSUMED FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.
In order to obtain warranty service, simply take or ship the product postage prepaid to the nearest Authorized Norelco Service Location. It is suggested that for your protection you return shipments of product by insured mail, insurance prepaid. Damage occurring during shipment is not covered by this warranty. **NOTE:** No other warranty, written or oral, is authorized by Philips Electronics North America Corporation. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion and limitations may not apply to you.
*Read enclosed instructions carefully.

Manufactured for:
Philips Domestic Appliances and Personal Care Company
A Division of Philips Electronics North America Corporation
1010 Washington Blvd., Stamford, CT 06912-0015

UL LISTED This symbol on the product's nameplate means it is listed by Underwriters' Laboratories, Inc.

Norelco is a Registered Trademark of Philips Electronics North America Corporation.
AccuControl is a Trademark of Philips Electronics North America Corporation.

PHILIPS is a Registered Trademark of Koninklijke Philips Electronics N.V.

© 2005 Philips Electronics North America Corporation. All Rights Reserved.

Downloaded from www.Manualslib.com manuals search engine